

2364 Haines Rd., Unit 20-21 Mississauga, Ontario Canada

## **Plastic Insert Sleeve**


Designed fo cast-in plate step installation. Polyethylene Ribbed insert for hammer in step installation.

## **Application**


Installation (dry method): Hammer in Step to ribbed insert with a 2 kg (5 pound) rubber mallet.



Manhole Steps, Plastic Insert Sleeve

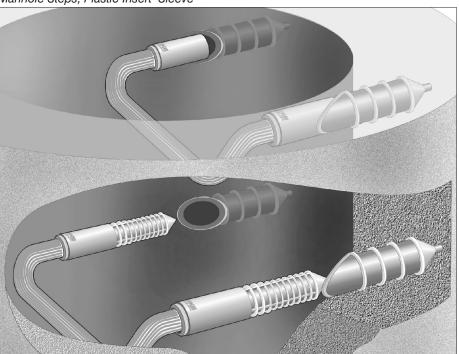



Plastic Insert Sleeve

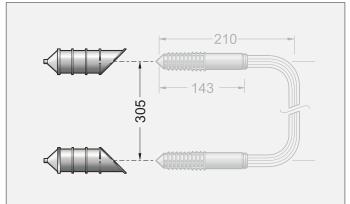

Side View





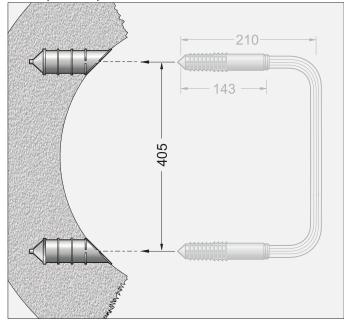

MODEL NO.	MH SIZE	STEP No.	STD. PACK
2222	48"-72" MH. D.A.	2016	350
2242	28" Rise Ring	2016	350

## **Precautions**

Wearing of safety glasses and employing any other necessary measures while installing. Manhole Steps is highly recommended